



## **WL2000 Liquid to Air Cooling System**

*Specification and User Manual Version 1.2*

Laird Thermal Systems s.r.o.  
Prumyslová 497  
462 11 Liberec  
Czech Republic

Phone: +420 488 575 111

[www.lairdthermal.com](http://www.lairdthermal.com)

Any information furnished by Laird and its agents, whether in specifications, data sheets, product catalogues or otherwise, is believed to be (but is not warranted as being) accurate and reliable, is provided for information only and does not form part of any contract with Laird. All specifications are subject to change without notice. Laird assumes no responsibility and disclaims all liability for losses or damages resulting from use of or reliance on this information. All Laird products are sold subject to the Laird Terms and Conditions of sale (including Laird's limited warranty) in effect from time to time, a copy of which will be furnished upon request.

© Copyright 2019-2021 Laird Thermal Systems, Inc. All rights reserved. Laird™, the Laird Ring Logo, and Laird Thermal Systems™ are trademarks or registered trademarks of Laird Limited or its subsidiaries.

## Table of Contents

<b>Table of Contents</b> .....	<b>3</b>
<b>Revision History</b> .....	<b>5</b>
<b>1. About this Manual</b> .....	<b>6</b>
1.1 Terms of Guarantee .....	6
1.2 Contact Information .....	7
<b>2. Product Identification</b> .....	<b>8</b>
2.1 Unit Specifications .....	8
2.2 Identification Plate .....	8
<b>3. Safety Regulations</b> .....	<b>9</b>
3.1 Hazard classes .....	9
3.2 Safety Symbols .....	9
3.3 Hints for Safe Operation .....	9
3.4 Prevent Hazards .....	10
3.5 Hints Regarding the Electrical Equipment .....	10
3.6 Environmental Issues .....	10
3.7 Safety Equipment .....	10
3.8 Safety and Signaling Equipment included in the Unit .....	11
3.9 Guards .....	11
3.11 In Case of Accidents .....	12
<b>4. Product Description</b> .....	<b>13</b>
4.1 Intended Use .....	13
4.2 Use not in Conformance with the Intended Use .....	13
4.3 Unit Components .....	14
4.4 Cooling Circuit .....	14
4.5 Specifications .....	15
4.6 Installation Requirements .....	16
4.7 Infrastructure .....	16
<b>5. Transport</b> .....	<b>17</b>
5.1 Safety Indications for Transportation and Setting-up .....	17
5.2 Transportation of the Unit .....	17
5.3 Unpacking .....	17
<b>6. Initial Operation</b> .....	<b>18</b>
6.1 Safety Indications Related to Initial Operation .....	18
6.2 Setting to Work .....	18
6.3 Cooling Circuit Connection and Filling .....	18
6.4 Electrical Connections .....	19
6.5 Carrying out Setting to Work .....	20
6.6 Daily Start-up .....	21
6.7 Setting to work after Storage .....	21

<b>7. Controlling the Unit</b> .....	<b>22</b>
7.1 Safety Indications for Controlling the Unit.....	22
7.2 Switching on the Unit .....	22
7.3 Switching off the Unit .....	22
7.4 Settings .....	23
7.4.1 Flow switch.....	23
7.4.2 Bypass valve .....	23
7.4.3 Setting the Thermostat.....	23
<b>8. Disruptions</b> .....	<b>24</b>
8.1 Disruption in Operation .....	24
8.2 Troubleshooting .....	24
<b>9. Maintenance and Cleaning</b> .....	<b>25</b>
9.1 Maintenance Schedule.....	25
9.2 Cleaning of Heat Exchanger .....	25
9.3 Refilling of Coolant .....	25
9.4 Cleaning of Strainer .....	26
9.5 Cleaning of Unit Casing .....	26
<b>10. Repair</b> .....	<b>27</b>
<b>11. Dismounting, Disposal, Storage</b> .....	<b>28</b>
11.1 Temporary Placing out of Operation .....	28
11.2 Repackaging of the unit .....	28
11.3 Storing the Unit .....	28
11.4 Disposal .....	28
11.5 Disposal of Operating Materials .....	29
<b>12. Wear Parts and Spare Parts</b> .....	<b>30</b>
<b>Addendum</b> .....	<b>31</b>
Flow scheme .....	31
Wiring diagram .....	32

## Revision History

REV	DATE	DESCRIPTION	NAME	Page
1.1	01-APR-2013	Original release		
1.2	10-Nov-2023	Document template updated to LTS format.	G Ducharme	Multiple

## About this Manual

This document is the English translation of the original Operation Manual in German language for the Water-Air Cooling Unit WL 2000 (called unit in the following). It is based on German safety regulations. In your country other regulations may apply.

This Operational Manual addresses the needs of the user of the unit. Its intention is to allow the safe operation of the unit. Thus, it should be read carefully and be kept in a space accessible for the users of the unit at any time.

All chapters of this Operation Manual can be read independently and thus can be used for look-up purposes.

### 1.1 Terms of Guarantee

General sale and delivery terms of Laird Thermal Systems apply. The buyer accepts these terms, at the latest when signing the contract of purchase.

The particular terms of guarantee and duration of guarantee of the unit in question can be taken from the contract documents as well as from the order confirmation.

Warranty claims and liability are excluded in case of one of the following situations:

- Use of the unit in an unintended way
- Inaccurate installation, putting into service, operation, repair or maintenance of the product by people that are not fully authorized
- Use of the product despite of defect, wrongly implemented or non-functional safety units or protective gear
- Unauthorized or forbidden modifications by the user concerning the electrical equipment of the unit
- Unauthorized or forbidden modifications by the user concerning the mechanical structure of the unit
- Unauthorized or forbidden modifications by the user concerning the operating parameters
- Use of unauthorized tools
- Use of unauthorized operating supplies
- Exceedance of mandatory maintenance intervals
- Cases of disaster caused by foreign matter influence or act of nature beyond control

#### NOTE

Any form of unintended use of the unit and any structural change caused by the user without prior authorization in written form by Laird Thermal Systems will lead to the termination of warranty as well the termination of the declaration of conformation and will free Laird Thermal Systems from product liability. This concern includes safety devices as well.

In case of authorized changes or when adding optional equipment, it is the sole responsibility of the customer to assure the accurate implementation of the required safety devices.

## 1.2 Contact Information

If you have questions with respect to this unit please use the contact information given below. Always communicate the following:

- Your name and address
- Name of contact at your address
- Product data as on identification plate: Type of unit, serial number and year of manufacture

Company contact:

Laird Thermal Systems s.r.o.  
Prumyslová 497  
462 11 Liberec

Czech Republic

## Product Identification

### 2.1 Unit Specifications

Manufacturer	Laird Thermal Systems GmbH
Type of product	Water-air cooler
Type of unit	WL 2000
Article number	1520.00

Table 1: Unit specifications

### 2.2 Identification Plate

The identification plate is attached to the front side of the unit (see Fig. 1).

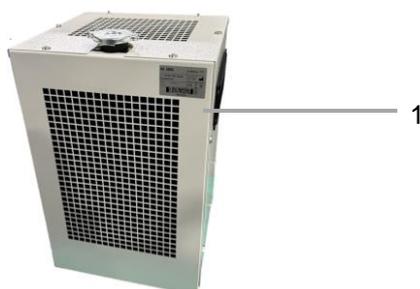


Fig. 1: Position of identification plate

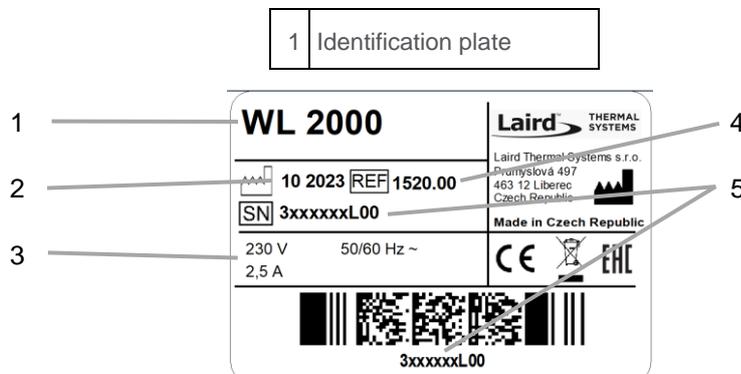


Fig. 2: Unit specific identification plate

1	Unit type	4	Article number
2	Date of manufacture	5	Serial number
3	Electrical specifications		

## Safety Regulations

### 3.1 Hazard classes

In this document safety instructions are using standardized representation and symbols. Depending on the probability of their incidence and the severances of consequences three hazard classes are used.



#### DANGER



Reference to direct danger for humans.

Inobservance will lead to irreversible injuries or death.



#### CAUTION

Reference to noticeable danger for humans or possible damage to property.

Inobservance may lead to reversible injuries or to damage to property.

### 3.2 Safety Symbols

In this Operation Manual concrete safety instructions are given in order to point out unpreventable residual risks when operating the unit. These risks include danger for

- Human beings
- The unit and other equipment
- The environment

The safety symbols used in this manual are indicated below. The main reason for their use is to point the reader to the safety instruction given in the text field beside.

Symbol	Meaning
	Warning with respect to general danger or damage to property
	Warning with respect to electrical hazard

Table 2: Warning signs

Symbol	Meaning
	This symbol indicates that disconnecting from mains is required.

Table 3: Signs giving orders

### 3.3 Hints for Safe Operation

#### NOTE

##### Conduct inspections on a regular time base!

This will ensure that the appropriate measures will be carried out indeed.

The unit is operationally safe. It was built according to the existing state of technology.

Despite this, the unit could cause hazards if it:

- is used in a way it was not intended for
- is used improperly
- is operated under unsuitable conditions

### 3.4 Prevent Hazards

Hazards can be prevented by safety-conscious and anticipatory behavior of staff.

Everybody working with the unit should keep the following in mind:

- Make this Operation Manual available for everybody at the operational location of the unit in a complete and perfectly readable form!
- Use the unit exclusively for what it was intended!
- The unit must be operational and error free. Check the condition of the unit before working with it and within a regular time frame!
- Make sure that nobody can injure himself by any part of the unit!
- Any disruption or recognizable change concerning the unit should be reported to the responsible person!
- Stick to the accident prevention regulations as well as any regional regulations!

### 3.5 Hints Regarding the Electrical Equipment



**DANGER**



**Danger to life through electrical shock when working on the electrical equipment of the unit!**

- Switch off the unit before starting your work!
- Disconnect the unit from mains by pulling the mains plug!
- Verify that the installation is dead (volt-free)!
- Carry out earthing or short circuiting!

When working on electrical installations the following principles should be observed:

- Work on the electrical installations may only be accomplished by qualified electrical staff!
- When connecting electrical equipment to mains regional regulations must be observed. Be aware of the information in the wiring diagram!
- The unit is powered by electricity. Electrical shock hazard exists if the electrical installations are defective or the insulation fails during operation.
- When switched off the unit is not disconnected from mains. This is only the case when the mains plug is pulled.
- Any changes regarding the control elements of the unit can have an influence on the safe operation. All intended changes must be authorized by the manufacturer.
- After the implementation of a change the safeguard operations must be verified.
- No unauthorized changes on the unit are allowed. All intended changes must be authorized by the manufacturer.

### 3.6 Environmental Issues

Always observe hazardous impacts to the environmental.

The following principles apply for environmentally conscious behavior:

- Environmentally hazardous substances must not get into the ground or the drains. They should be kept in appropriate containers.
- Environmentally hazardous substances must be disposed of according to regional regulations.

When dealing with operating supplies always keep aware of the safety data sheet of the corresponding manufacturer.

### 3.7 Safety Equipment

#### NOTE

The safety equipment listed below must be integrated in the local control environment by the customer, unless otherwise noted. These works must be carried out only by trained experts. All required information can be taken from the wiring diagram shown in the addendum.

Safety equipment must not be modified, removed or taken out of operation. All parts of the safety equipment must be always accessible.

### 3.8 Safety and Signaling Equipment included in the Unit

The unit is equipped with safety equipment at critical spots (see Fig. 3)

1. The water flow is monitored by a flow switch that must be integrated in the potential-free safety circuit of the device to be cooled.
2. The maximum pump pressure is limited by a safety valve that by-passes the liquid stream when the pressure pre-set is exceeded.
3. The maximum temperature of the cooling circuit is monitored by thermostat with an opener contact that must be integrated into the safety circuit of the device to be cooled.



Fig. 3: Safety equipment

1	Flow switch	3	Thermostat
2	Safety valve		

### 3.9 Guards

Direct access to hazardous parts or areas of the unit is restricted by the unit cover. The cover may only be removed for the purpose of maintenance or repair works and shall be replaced prior to taking the unit back into operation. The top and two side (non-ventilated) panels are removable. Each panel is held in place with 6 screws. The top panel must be removed before either side panel can be removed.



Fig. 4: Removable Panels

1	Top Panel	3	Side Panel – Right (not visible)
2	Side Panel - Left		

### **3.11 In Case of Accidents**

Should you or another person be injured when working with the unit:

- Stay calm!
- Render first aid!
- Call the company first-aid responder without exception!

## Product Description

### 4.1 Intended Use

The water-air cooler WL 2000 is used for the cooling of a water circuit. As a coolant water or a water/glycol mixture may be used. The coolant circulates between the cooling unit and the device to be cooled. It is re-cooled by an air-cooled heat exchanger. The maximum cooling capacity depends on the difference between the ambient temperature and the temperature of the coolant forward flow. Its value is 2000 Watts for a temperature difference of 11 K.

The unit is exclusively intended for use in industrial and commercial environments.

The intended use also includes the observance and following of all recommendations given in this Operation Manual.

### 4.2 Use not in Conformance with the Intended Use

Operation of the unit under improper operational conditions is not allowed, since otherwise the operation safety cannot be granted.

When using the unit in a way not compliant with the intended use, hazardous situations may occur.

Operation of the unit is not allowed under the following conditions:

- The unit is used for a purpose other than the one it is intended for.
- The unit or parts of it are damaged, the electrical installation is not correct or the insulation is broken.
- Protective or safety equipment is not functional or defect, improperly installed or missing.
- The unit is not working properly.
- Controlling devices were modified in a way that is not permitted.
- Operational parameters were changed in a way that is not permitted.
- Operation in areas exposed to explosion hazards
- Operation with cooling media not according to specification
- Use of unauthorized tools
- Exceedance of the compulsory maintenance intervals


#### NOTE

The manufacturer is not liable for damage occurring when using the unit in a way it was not intended for. When using the unit in a way it was not intended for, the manufacturer's warranty given by Laird Thermal Systems will expire.

---

### 4.3 Unit Components

Additional information can be retrieved from the flow scheme shown in the addendum. The unit consists of the following main components:

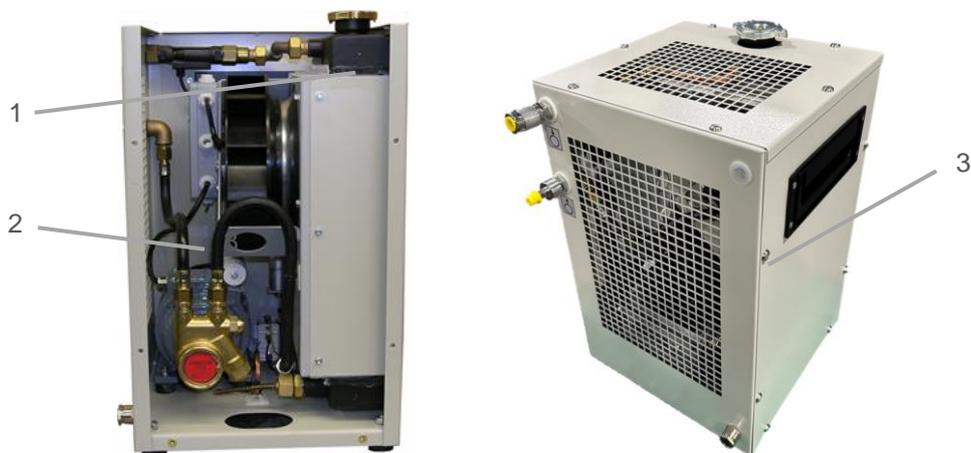

*Fig. 5: Main components*

1	Coolant container and heat exchanger	3	Casing
2	Cooling circuit		

### 4.4 Cooling Circuit

In the cooling circuit the coolant is driven by the pump to the device that is to be cooled and back via the return flow. The heat is dissipated into the ambient air by an air-cooled heat exchanger. Exceeding of the maximum system pressure is prevented by an over pressure bypass valve in the pump head.

The water temperature is monitored by an electric thermostat and water flow is monitored by a flow switch. Both switches are wired in series to the terminal block and must be integrated into the safety circuit of the device to be cooled.

## 4.5 Specifications

### Dimensions and weight

Length:	300
Width:	305 mm without hose
Height:	505 mm
Weight:	26.5 kg (empty)
Coolant capacity:	2.5 liters

**Table 4:** Dimensions and weight

### Performance data

Cooling capacity:	2.0 kW
Flow (50/60 Hz):	4.4 L/min @ 5.1 / 5.5 Bar
Mains voltage:	230 VAC, 50/60 Hz
Current draw:	2 A

**Table 5:** Performance data

### Environmental conditions

Operating temperature:	+5°C ... +40°C
Storage temperature:	-25°C ... +70°C (empty)
Relative humidity:	20% ... 80%

**Table 6:** Environmental conditions

### Settings

Flow switch	4.0 ± 0.3 lpm (opening)
Thermal switch	45°C ± 5°C
Maximum pressure	6.5 ± 0.5 bar

**Table 7:** Settings

## 4.6 Installation Requirements

### Installation Location

- The location must be even.
- When choosing the installation location, the following must be kept in mind: the air flow of the cooling air must not be restricted, supply and return flow connections must be easily accessible and all tubes must be installed without sharp bends.

### Environmental Conditions



#### CAUTION

**Risk of damage through unsuitable environmental conditions.**

**Damage to property and corrosion damage may result and are not covered by manufacturer's liability.**

- The unit is only authorized for use in indoor environments.
- The unit must not be stored or operated in harsh, humid environments.
- The unit must not be stored or operated outdoor.

Pay attention to the environmental conditions as given in the specifications on page 15.

## 4.7 Infrastructure

The following infrastructure is required for connecting the unit:

Parameter	Rated value
Operating voltage	230 VAC

*Table 8: Required infrastructure*

## Transport

### 5.1 Safety Indications for Transportation and Setting-up



#### CAUTION

**Risk of injury by lifting the unit!**

**The weight of the unit is almost 30 kg.**

- Do not lift the unit manually!
- Always use proper auxiliary means such as a forklift or a jack lift!

### 5.2 Transportation of the Unit

The unit is delivered wrapped in foil on a transportable pallet. Leave the unit on the pallet until bringing it into service. Use a forklift or jack lift for transportation to the installation location.

### 5.3 Unpacking

Remove the foil before setting up the unit!

Inspect the unit regarding:

- Damage caused by transportation
- Completeness of delivery

Lift the unit with a forklift or jack lift off the transportable pallet.

Dispose of the packaging material in accordance with regional regulations.

#### NOTE

Laird Thermal Systems advises to keep the transportable pallet for later transportation of the unit.

## Initial Operation

### 6.1 Safety Indications Related to Initial Operation



#### CAUTION

**Danger of malfunction caused by faulty connections during initial operation!**


Before switching on the unit make sure that

- all safety equipment of the unit is implemented and functional
- all connections were properly made

Please follow the rules in chapter Safety Regulations on page 9.

### 6.2 Setting to Work

#### Placement

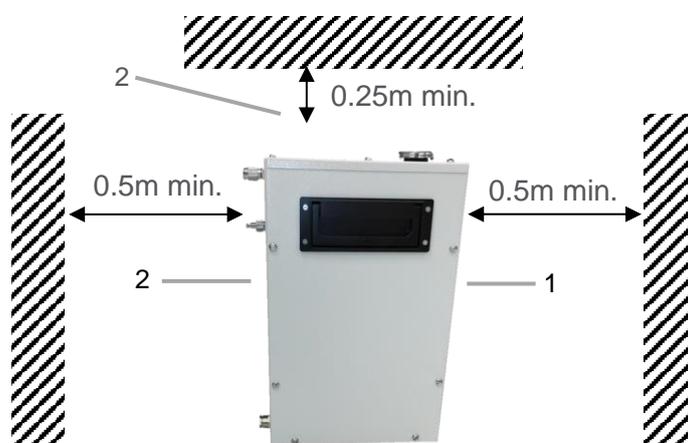

**Fig. 6:** Minimum clearance for air entrance and air exit

1	Ventilation openings - inlet	2	Ventilation openings - outlet
---	------------------------------	---	-------------------------------

- 1) Move the unit to its installation location as mentioned on page 17.
- 2) Place the unit in a way that air entrance and air exit are not obstructed. Clearance on the vented sides and top must not be less than 0.5 m, otherwise cooling capacity may be restricted.

#### NOTE

In case of storage of the unit at temperatures lower than 5°C or higher than 40°C for longer periods please wait 3 hours prior to initial operation to allow for temperature adjustment.

### 6.3 Cooling Circuit Connection and Filling



#### CAUTION

**Risk of damage by using improper cooling hoses!**

**This may lead to damage or corrosion to the unit.**

- When choosing cooling hoses pay attention to sufficient burst strength and compatibility with coolant!
- Only use cooling hoses without any signs of damage!

The cooling connections are Walther Type MD 006 quick disconnects. Mating connectors are not supplied with the unit. Proper mating connectors must be used in order to ensure leak free operation. Water outlet and water inlet are indicated with respective symbols.




**Fig. 7:** Labeling of water inlet and water outlet

- 1) Connect a suitable hose to the fittings for water inlet and water outlet and secure it with a host clamp.
- 2) Connect the hoses to the corresponding connections of the device to be cooled.

#### NOTE

When connecting the cooling hoses pay attention to flow direction. Follow the documentation from by the manufacturer of the device to be cooled.

Transparent hoses stimulate algae growth that may increase the error-proneness of the components built into the unit. Thus, only use non-transparent hoses.

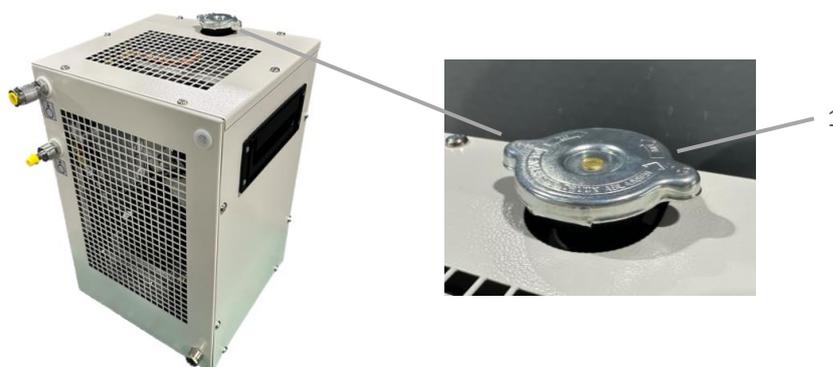

**Fig. 8:** Cap of coolant container

1	Cap
---	-----

- 1) Open the coolant container by removing the cap.
- 2) Fill the coolant container with about 2.5 liters of water or water/glycol mixture.
- 3) Fill additional water or water/glycol mixture into the container until reaching the top.
- 4) Close the coolant container by fitting the cap.

## 6.4 Electrical Connections



**DANGER**



**Danger to life through electrical shock when working on the electrical equipment of the unit!**

- Switch off the unit before starting your work!
- Disconnect the unit from mains by pulling the mains plug!
- Verify that the installation is not powered (volt-free)!
- Carry out earthing or grounding!



**CAUTION**

**Risk of damage through improper connections!**


Improper integration of the unit into the safety circuit of the device to be cooled will lead to the inoperativeness of the safety equipment listed in chapter 3.7 on page 10.

- All connections required must be incorporated according to the wiring diagram shown in the addendum.
- Ensure that all connected safety equipment is properly functioning.
- All work should be carried out only by expert.

**NOTE**

The unit is delivered without a mains cable. The electrical connection as well as the integration into the safety circuit of the device to be cooled are the customer's responsibility and must be accomplished by expert staff.

Required information can be drawn from the specifications listed on page 15 and the wiring diagram in the addendum.

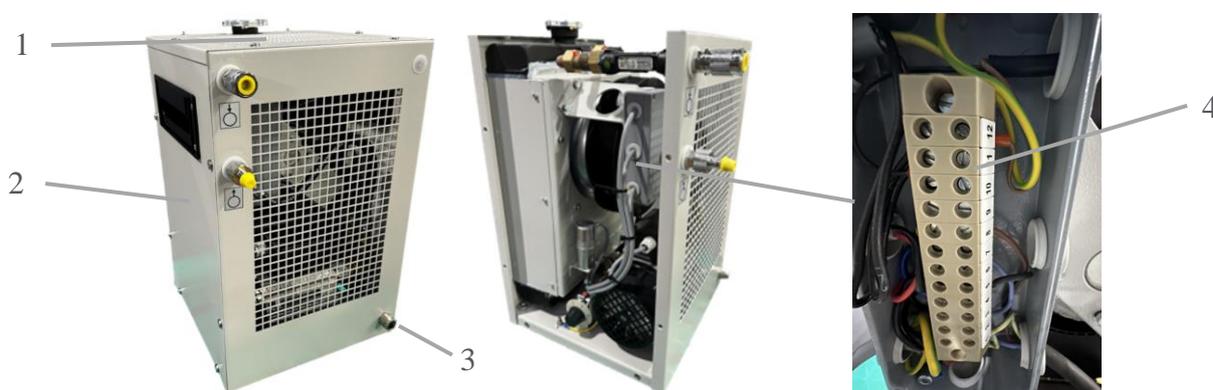

**Fig. 9:** Electrical connections and terminal behind casing

1	Casing top panel	3	Cable bushing
2	Casing left side panel	4	Electric terminal strip

- 5) Remove the top casing panel after unscrewing the 6 screws.
- 6) Remove the left casing panel after unscrewing the 6 screws.
- 7) Feed the mains cable and safety circuit cable through the cable bushing and make the connection to the terminal.
- 8) Remount the casing panels.

After installation of the mains cable connect the unit to mains by inserting the mains plug or making a mains connection as required.

### 6.5 Carrying out Setting to Work

After connecting the cooling circuit, filling the coolant container and finishing the electrical connections follow the steps below for setting the unit to work:

- 1) Remove the cap on the coolant container.
- 2) Switch on the unit and let it run for about 10 minutes in order to fill and vent the cooling circuit. Continuously check the filling level during this procedure.



**CAUTION**

**Lack of coolant may destroy the pump!**

When looking into the filling plug of the coolant container the filling level must always be above the heat exchanger fins.

- 3) If required, refill coolant.
  - 4) Check the compliance with the operational parameters as specified on page 15.
  - 5) Remount cap on coolant container.
- ⇒ The unit is ready for operation.

### **6.6 Daily Start-up**

Switch on the unit about 1 minute prior to using the equipment that is to be cooled.

### **6.7 Setting to work after Storage**

Setting to work after storage will have to follow the same procedures as required for initial operation (see chapter 0).

## Controlling the Unit

The unit is controlled using the controls of the equipment that is to be cooled.

All alarm and error signaling is only indicated on the control panel of the equipment that is to be cooled.

### 7.1 Safety Indications for Controlling the Unit



#### CAUTION

##### Lack of coolant may destroy the pump!

- Operate the unit only when the filling of coolant container is sufficient!
- Check the filling level of the coolant container regularly!

Also pay attention to the information in the chapter Safety Regulations on page 9.

### 7.2 Switching on the Unit

- The unit is ready for switching on.
  - 1) Switch on the unit about 1 minute prior to operation of the device to be cooled using the appropriate control of that device.
  - 2) Check the compliance with the operational data according to the specifications listed on page 15.
- ⇒ The unit is running.

### 7.3 Switching off the Unit

- Cooling operation has come to an end.
  - 1) Switch off the unit using the control of the device to be cooled.
  - 2) Close all valves that may exist in the extension of the hoses running to and from the unit.
- ⇒ The unit is out of operation.

## 7.4 Settings

### NOTE

The flow control device and the by-pass valve are set according to specification and sealed. Any modifications to these settings lie in the sole responsibility of the customer and must only be carried out by expert staff.

The adjustment of the flow control device should not be made without the help of proper measuring equipment, as the switching point must be set in a controlled way. Otherwise the function of the safety circuit might not be reliable and, as a result, the device to be cooled might get damaged.


### 7.4.1 Flow switch

The flow switch contains a closing contact whose OFF threshold is pre-set to a throughput of 4.0 liters per minute. For setting the switching point the switch head must be adjusted. For that purpose, the screw retained by red locking varnish must be released and the switching head must be moved while the throughput change is monitored by a flowmeter. After setting the switching point the head fixing screw must be tightened firmly again.

### 7.4.2 Bypass valve

The bypass valve is set by the manufacturer to a maximum pressure of 7 bar. If any modification to this setting should be required, please contact the Laird Thermal Systems service department to receive briefing.

### 7.4.3 Setting the Thermostat

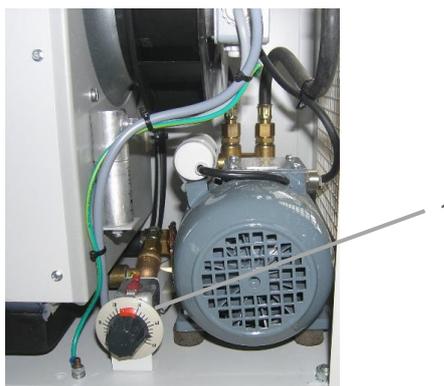

**Fig. 10:** Thermostat

1	Knob of thermostat
---	--------------------

The unit is delivered by the manufacturer with the thermal switch being set to 45°C. The thermal switch can be adapted to meet changing needs.

#### **Increase the temperature setpoint**

2) Turn the knob clockwise.

⇒ The switch-off temperature is set to a higher value.

#### **Decrease the temperature setpoint**

3) Turn the knob counter-clockwise.

⇒ The switch-off temperature is set to a lower value.

## Disruptions

### 8.1 Disruption in Operation

The most common reason for disruption in operation of the unit is improper maintenance. Maintenance should be carried out regularly according to the intervals defined on page 25.

In case of disruption start with checking the following:

- Fan polluted or blocked?
- Coolant polluted?
- Low coolant contents because of leakage, evaporation or an extended cooling circuit with long hoses?

More help can be found in the following paragraphs.

In case you do not succeed in identifying the problem cause by means of this manual please contact the service department of Laird Thermal Systems.

### 8.2 Troubleshooting

For troubleshooting you may rely on the following:

- Alarm signaling within the safety circuit of the device to be cooled
- Wiring diagram
- Flow scheme
- Troubleshooting table given below

Problem	Possible reason	Countermeasure
The unit does not start	Electrical connection not correct or no mains connection	Check connection, insert mains plug, check main power switch
The unit is running, but cooling capacity is not available or too low	External hoses sharply bent?	Pay attention to smooth bends, when hoses are connected
	Unit properly located?	Clearance to walls not less than 0.5 m and 0.25m above the unit
	Is there flow in cooling circuit?	Flow is signaled potential-free by the safety equipment of the unit and can be visualized in the range of controls of the device to be cooled.
	Contents in coolant container low	Check coolant level, refill coolant if necessary → page 20
	Fan turning?	Cover the ventilation grid next to the fan with a sheet of paper. If the paper is held by the airflow, the fan works properly.
	Ambient temperature too high?	Check specifications → page 15
Noisy unit	Contents in coolant container low	Refill coolant

**Table 9:** Troubleshooting list

## Maintenance and Cleaning

Diligent maintenance is the prime factor for assuring an error-free and efficient operation of the unit. Operating personnel can perform these tasks when properly trained.

### 9.1 Maintenance Schedule

Device	Activity	Interval	Criteria	Tools	Performer
Heat Exchanger	Clean	Minimum weekly (if required, daily)	Cooling fins and ventilation grids not polluted	Slotted screw driver 7 x 1 mm, compressed air, vacuum cleaner	Operating personnel
Coolant container	Check filling	Weekly	Coolant level well above internal heat exchanger tubes	Visual inspection	Operating personnel
Strainer	Clean, replace if required	Every 3 months, more often when coolant polluted	Strainer undamaged and clean	Metric AF24 wrench, cloth or vessel	Operating personnel

*Table 10: Maintenance schedule*

### 9.2 Cleaning of Heat Exchanger

Cooling capacity is heavily reduced if the heat exchanger is polluted. The heat exchanger must be checked for pollution regularly and be cleaned if required.

For cleaning the heat exchanger follow these steps:

- 1) Disconnect the unit from mains.
- 2) Remove the top and a side panel.
- 3) Clean the heat exchanger using compressed air opposite to the direction of air flow. the unit (i.e. from the inside out). Be careful in order not to damage the cooling fins.
- 4) Remove any pollution from the ventilation grid using a vacuum cleaner.
- 5) Remount the top and side panel.

⇒ The unit is ready for operation.

### 9.3 Refilling of Coolant

Since the cooling circuit is an open circuit, evaporation of coolant may occur. Thus, the filling level of the coolant container must be checked regularly and coolant might have to be refilled as described on page 20.

## 9.4 Cleaning of Strainer

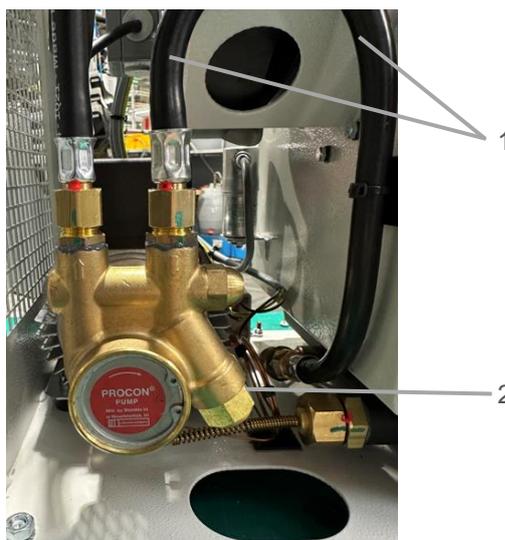


Fig. 11: Location of strainer

1	Pump suction hose	2	Strainer cover
---	-------------------	---	----------------

- 1) Disconnect the unit from mains.
- 2) Remove the top and right side panel.



### CAUTION

**A small amount of coolant will leak from the pump.**

Use a cloth or an appropriate vessel for absorption.

- 3) If the coolant is not drained from the unit, it will drain from the heat exchanger through the pump strainer when opened. To reduce the amount of leakage, the pump suction hose can be bent or kinked to prevent coolant from flowing while the strainer cover is removed.
- 4) Remove the strainer cover using an adjustable wrench.
- 5) Remove the strainer and clean it using hot water and soft bristle brush. In case of damage the strainer must be replaced.
- 6) Remount the strainer and screw on the cover.
- 7) Should any coolant leak from the strainer the cover must be screwed on using a little more force.
- 8) Remount the side and top panel.
- 9) Start-up the unit for venting the cooling circuit (see page 20).
- 10) Check the coolant level and refill, if required.

## 9.5 Cleaning of Unit Casing



### CAUTION

**Risk of damage through use of improper cleaning material. When using aggressive or abrasive cleaning agents corrosion may occur as result of a damaged paint film.**

- For cleaning the unit casing only use mild cleaning agents (e.g. dish washing detergents)!
- Use clean and lint free cloth for cleaning!

Regularly remove dirt from the casing of the unit to prevent corrosion damage and clogging of the air grids. Pay attention that all the nameplates at the unit are always clean and legible.

## Repair

In case of malfunction during the warranty period the unit must be sent to the Laird Thermal Systems service department for repair (see page 7). When warranty has expired, no restrictions from the side of Laird Thermal Systems exist with respect to repair work carried out by the customer as long as guarantee and warranty conditions remain untouched. In any case only expert staff is authorized for doing repair work.

### NOTE

When doing repair work on the unit always be aware of the safety regulations as defined on page 9.

## Dismounting, Disposal, Storage

### 11.1 Temporary Placing out of Operation

For placing the unit out of operation for maintenance or repair follows the steps below:

- Cooling operation is finished.
  - 1) Ready collection container and put it below the coolant inlet and outlet ports of the unit.
  - 2) Disconnect the hose from both the inlet and outlet ports.
  - 3) Waiting for the coolant to drain until there's no flow from either port.
  - 4) Using a wet vacuum, connect the vacuum source to the outlet port (lower of the two ports) until air can be heard passing through the system cleanly with not water noises.

#### NOTE

The coolant must be collected and disposed of according to valid regulations.

- 5) Reconnect the hose or put plastic cover on the port when drained completely.

⇒ The coolant is now drained.



*Fig. 12: Inlet and Outlet Ports for Draining*

1	Inlet Port	2	Outlet Port
---	------------	---	-------------

### 11.2 Repackaging of the unit

- The unit has been emptied (see procedure above).
    - 1) Lift the unit with a forklift or jack lift and place a transportable pallet under it.
    - 2) Enclose the unit including the transportable pallet with shrinking foil and shrink the foil tight.
- ⇒ The unit is ready for transportation.

### 11.3 Storing the Unit

The storage area must be even and the unit should not stand on an edge or other obstructive object. The environmental conditions for storage of the unit or parts of it can be found in the specification paragraph on page 15.

### 11.4 Disposal

The unit was manufactured mainly from recyclable material. Make sure the components of the unit end up at a qualified company for disposal and recycling.

Contact Laird Thermal Systems for take back of end-of-life units (see company contact on page 7) or ask a qualified company for disposal and recycling.

## **11.5 Disposal of Operating Materials**

The operating materials of the unit can be hazardous to the environment and to health.

- Make sure the operating materials are disposed of or recycled according to local regulations.
- Also, the safety specifications of the coolant manufacturer must be obeyed.

## Wear Parts and Spare Parts

Spare parts must comply with the technical specifications defined by Laird Thermal Systems. Original Laird Thermal Systems parts are subject to strict obligations and fulfill these requirements.

Laird Thermal Systems does not provide warranty service in case of damages caused by the use of spare parts made by manufacturers other than Laird Thermal Systems.

### NOTE

#### Identification data concerning the unit and spare parts

The type of unit and the article number can be found on the identification plate of the unit. The corresponding numbers in Fig. 13: as well as the part descriptions are listed in the spare part list.

Please direct your inquiries and orders to Laird Thermal Systems (contact see page 7) with the following detailed information:

- Type of unit
- Article number
- Serial number
- Part description
- Quantity
- Shipping details

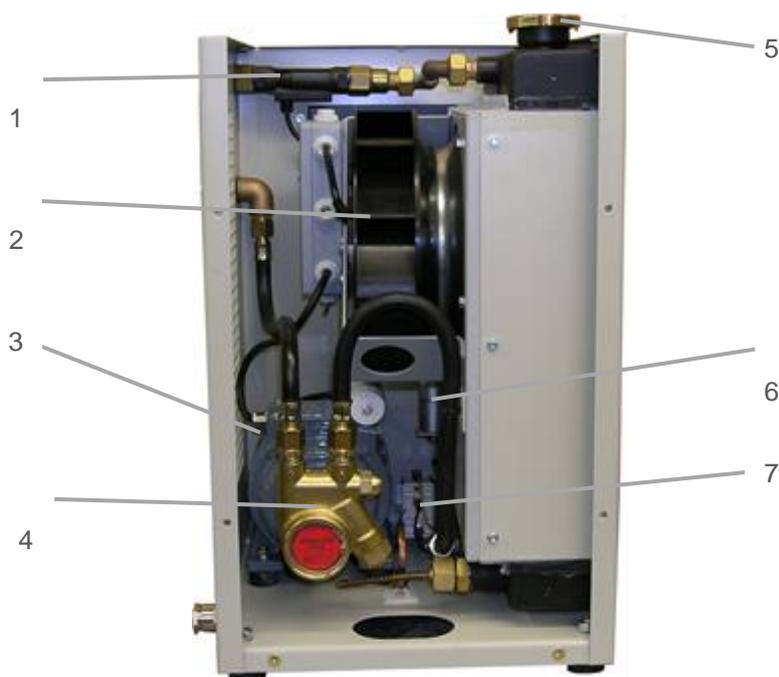


Fig. 13: Spare parts overview

Pos.	Description	Item No.
1	Flow switch	2073.00
2	Fan	2069.00
3	Motor	2079.00
4	Pump	2068.00
5	Spare CAP - heat exchanger	2075.00
6	Capacitor	2058.00
8	Temperature controller	2074.00

Table 11: Spare parts

Addendum

Flow scheme

